



INSTALLATION INSTRUCTIONS

Accessory

FABRIC MID PANEL (4P)
FABRIC REAR PANEL (2P)
P/N 0SR95-HL3-211A

Application

SXS700M4/M2

Publication No.


MII 14607

Issue Date

August 2013

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

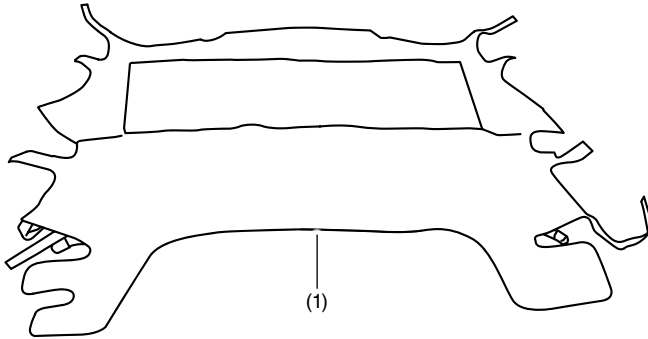

No.	Description	Qty
(1)	Window	1

USE AND CARE INFORMATION

- Completely read and understand the instructions before installing this accessory.
- Do not tow the vehicle on an open trailer with this accessory installed, as the accessory is not designed for use at highway speeds.
- To clean, sponge with mild soap and cold water, rinse with a hose and allow it to drip-dry.
- Do not machine wash or dry.
- Use mild detergent to remove stubborn stains.


NOTICE

- This accessory will create the need for more frequent air cleaner maintenance. Service the air cleaner daily when operating in dusty conditions.


INSTALLATION

1. Install the window over the upper middle cab frame cross bar, directly behind the driver and passenger, and zip together.


MIDDLE CAB FRAME CROSS BAR

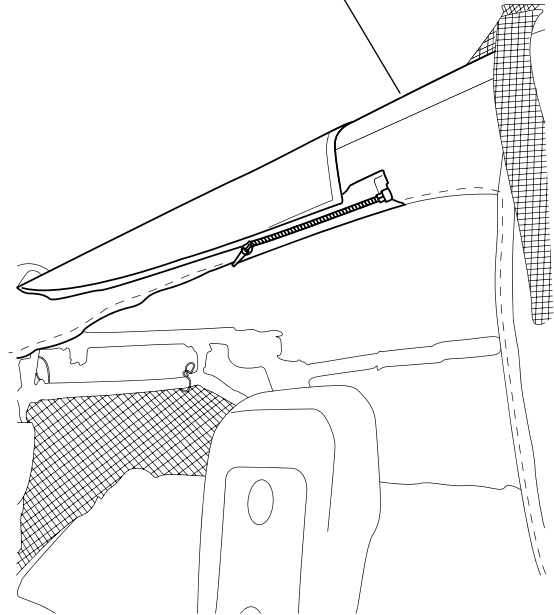


2. Route the top strap over the cab frame and attach it to the hook and loop as shown.

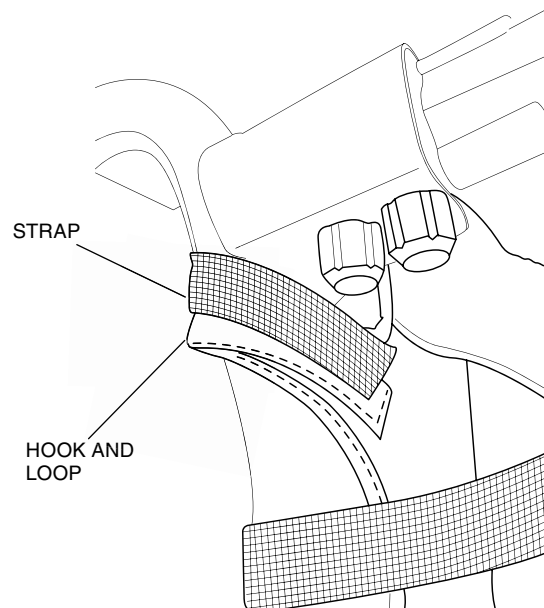

3. Tilt the cargo bed rearward to dump position.
4. Tuck the rear window behind the driver and passenger seats as shown.
5. Route the strap around the cab frame as shown, then loop the strap through ladder loc as shown.

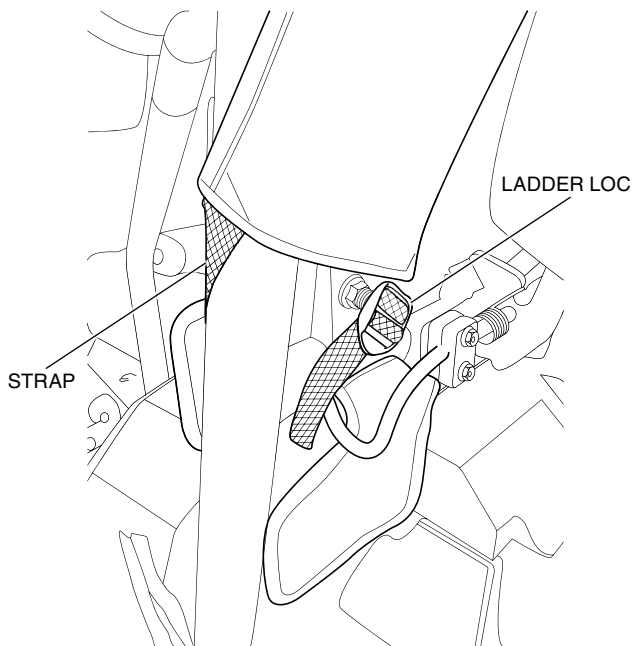

6. Route the mid straps as shown and attach them to the hook and loop as shown.

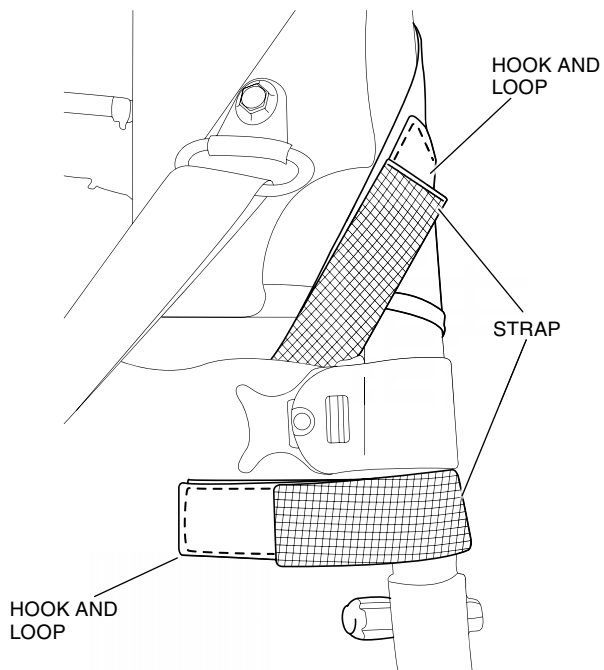

7. Tighten all straps so that the window fits tight and is centered.
8. Return the cargo bed to its down position.